



Using the Wireless Presenter

(USD Wireless Presenter Pilot Program)


Please Do Not Switch USB Sticks!

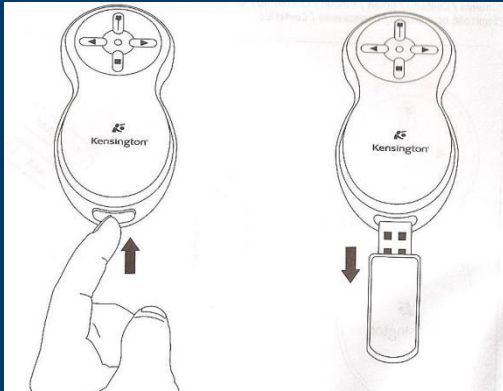

Remove USB Stick from bottom of presenter

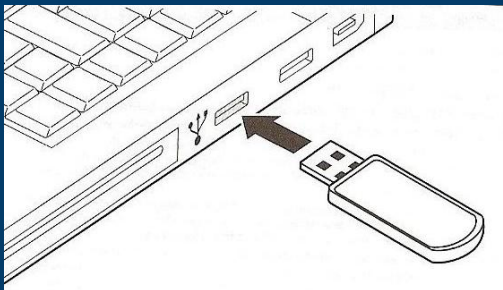

Plug USB Stick into any USB Port – Allow computer to 'recognize' the USB device – Can take up to :30 seconds

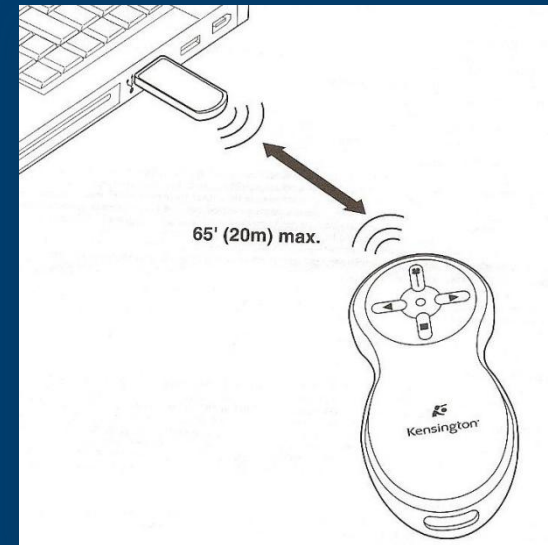

Open your Presentation and the presenter can be use to advance, backup or black out your Presentation (it also includes a laser pointer – do not point at face.